



R I M A G E™

Prism Printer Advanced Feature Instructions



Enjoy high performance and the added features of **PrismPlus!*** when using genuine Rimage ribbons! Rimage **PrismPlus!** validates your certified Rimage ribbon, enabling the fastest printing rate available and activating the ribbon consumption monitor.

Validating a Single-Color Ribbon

Rimage **PrismPlus!** Validates your certified Rimage ribbons and gives you the fastest available print speeds for increased production and rapid workflow.

To validate your single-color ribbon, install a Rimage certified ribbon, following the instructions on the ribbon leader to leave a portion of the leader under the print head. (A validated single-color ribbon has a mark stating **STOP – Wind Leader Onto Take-up Core Stopping Here.-** to assure proper positioning.)

Press the Unit Attention Button to close the drawer. The printer detects the leader markings and winds the remaining leader onto the take-up core, validating 240 meters (787.4 feet) of ribbon.

Validating a 2- or 3-Color Ribbon

Begin printing only when the printer indicates that it's out of ribbon. The printer validates 500 3-color disc prints or 825 2-color disc prints.

Ribbon Consumption Monitor

This feature lets you know when less than 100 prints remain on your certified Rimage ribbon.

With its flexible nature, the Prism 5 printer's variable rate of single-color ribbon consumption (anywhere from 2,100-40,000 or more prints per ribbon) makes it difficult to anticipate when a ribbon will run out. Ribbon consumption monitoring measures how much ribbon the printer consumes, tracks how much ribbon is left, and alerts you when only 100 prints remain.

Note: If the Prism printer has a validated single-color ribbon and you replace it with a 2- or 3-color ribbon, ribbon consumption monitoring is suspended; it resumes when you start printing with a single-color ribbon.

Low Ribbon Indication

The Missing CD LED flashes continuously to indicate that less than 100 prints remain.

Ribbon-Out Indication

The Missing CD LED flashes with the Error LED lit, or on power-on, the Missing CD LED and the Error LED light temporarily while the printer beeps.

* Patent pending. **PrismPlus!** is available only on Rimage Prism Series 5 Printers.