


Thank you for purchasing a Mediatechnics' Fusion Series Autoloader!

Quick Set-Up for Duplication

This is a quick set-up page to get your autoloader installed and ready for duplication before you tear into the User Manual and read it from cover to cover. You will find that our systems are extremely user-friendly and very efficient. By following these simple steps, you will be confident in beginning operation of the Fusion Autoloader, while you take the time to familiarize yourself with the manual and all of its useful information.

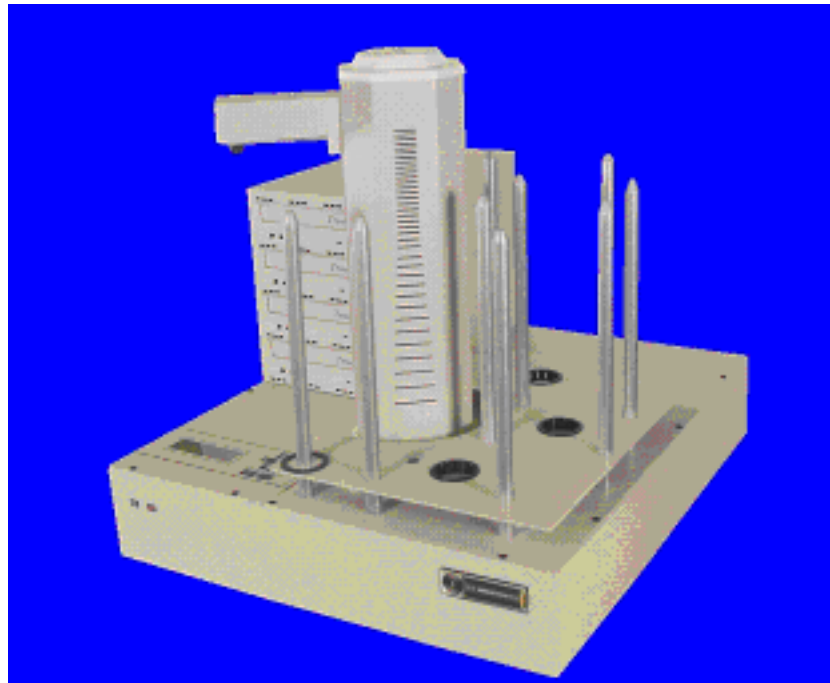

CONTENTS OF THE AUTOLOADER BOX:

Inside the autoloader box, you should find:

- 1. Autoloader System**
- 2. Power cord**
- 3. User Manual in CD version**
- 4. These Quick set-up Instructions**
- 5. If ordering a Printer with your system, you may find the appropriate printer plate and cabling**

**Mediatechnics Systems Inc.
Toll Free 1-800-474-8996**

STEP ONE:

Carefully remove autoloader from its carton using the hand cutouts in the foam base and lifting from the bottom. **DO NOT** attempt to lift the duplicator using the spindles, column tower, or pickarm, as these are delicate pieces and depended on for proper alignment and function of the unit. Place system on a level workspace free of debris, dust, humidity, excessive heat, and electronic or electromagnetic interference. Keep out of direct sunlight. Allow at least six inches of clearance on all sides of unit for ventilation. Remove protective plastic cover from system and save along with the rest of the Fusion packaging.

STEP TWO:

VERY IMPORTANT, if your system has one, remove the stabilizing bracket that is attached to the drive stack and column tower. This is an item used to stabilize the column tower in shipping only and could severely damage the autoloader if not removed prior to powering on the unit. Replace the screws that attached the stabilizing bracket to the column tower and drive stack, into their appropriate places, making sure that the two flat head screws are used on the drive stack. Save the stabilizing bracket along with the rest of the Fusion packaging.

STEP THREE:

Remove the zip tie that holds the pickarm in place at input hopper one. Using the enclosed 3-prong power cord, plug in the autoloader to a properly grounded AC receptacle. It is highly recommended that you use a surge protector to ensure safety in operation.

STEP FOUR:

Power on the unit. The arm will automatically calibrate itself into position. The system will run through a series of self-tests and the primary menu will then appear. It is recommended at this point, to setup your duplication options. Scroll to "Setup Menu" and press enter. The first options should read "Duplication Options". Press enter. In this menu you will be able to select personal options that will meet your specific needs, but for the time being, we recommend that you only select "none" for the printer option. To do this, scroll to "Printer", if it doesn't already read "none", use the left/right arrows to select this option. Later, when you are ready to setup your printer, you can change this option to match the type of printer you purchased. Press enter to save your choices. Press stop until you are back at the primary menu.

STEP FIVE:

You are now ready to start duplicating! Place your Master disc along with blank media into input hopper one, with the master on top. Select "Start Copying". At this point the screen should prompt you to enter an image name. Use the arrows on the keypad to do this. Press enter. You will then be asked for a copy quantity. Use the arrows for this as well. Press enter. The screen will ask you to insert Master Disc by pressing enter. The system will then check and unload any drives that harbor discs. After the unit completes this function, the arm will load your master into the first drive and begin reading it into the hard drive, where it will be stored unless you choose to delete it. When it is finished reading, the drive will open and the arm will unload the master and drop it onto the Accept Spindle. The arm will now load your blank media into the drive stack. And the system will begin the duplication process. All successfully burned discs will be dropped off onto the Accept Spindle or appropriate hopper until the system has completed the quantity of discs requested, or runs out of media. Should any disc fail in duplication due to a blemish or otherwise, it will be placed in the reject pile, which is just in front of the drive stack.

STEP SIX:

If you wish to observe the functions of the autoloader without actually burning any discs, first load the hoppers with "junk" media. You may then go into the utilities menu and choose "Loader Utilities", press enter. From there, choose "Autocycle". The system will then perform its robotic functions without reading or writing.

These Quick Setup instructions are intended for you to get your system up and running right away so that you may begin to duplicate. For more detailed instruction, or for printer set up, please refer to the Fusion User Manual CD, which was included in your package.

Thank you for your business, we look forward to serving you in the future!

TECHNICAL SUPPORT

If you need assistance with your system, please contact your re-seller or our technical support team:

**Monday through Friday 8:00 am - 5:00 pm Pacific Time
(530) 677-8996 phone Or (530) 677-8931 fax**

IT IS VERY IMPORTANT THAT YOU KEEP ALL OF THE PACKAGING FOR YOUR FUSION SYSTEM!!

Any authorized returned products for repair or otherwise, must be in their factory approved packaging to prevent voiding the warranty. An RMA number must be attained before packages will be accepted.

**Mediatechnics Systems Inc.
Toll Free 1-800-474-8996**